


# Model # 5950

## Installation Instructions

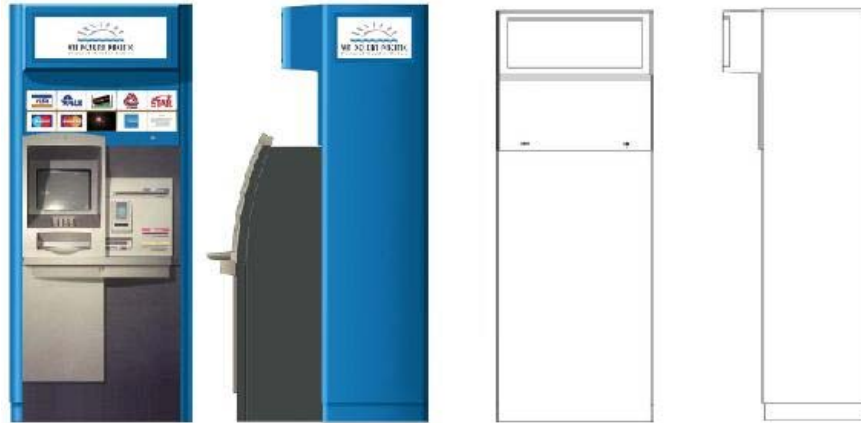

### STEP 1 – SITE PREPARATION

ATM is on site and about two or more feet forward of final position. Locate keys to unlock the top lid (not the safe) of the ATM. If required, arrange to have the proper personnel present while opening the ATM lid. Site electrical provisions should have already been made.

If there are leveling feet, lift the ATM slightly and adjust the feet so the ATM is approximately 1/4" off the floor. If there is not any leveling feet, 1/4" shims will need to be added to the four outer most corners of the ATM.

### STEP 2 – UNPACKING AND HANDLING

While transporting, uncrating, and handling, do not set the unit face against any obstruction without the appropriate padding.

#### INSTALLER FURNISHED TOOLS & SUPPLIES:

1. Pry bar to position and raise ATM for feet adjustment (If there are no leveling feet, 1/4" ABS shims will be needed).
2. Electric hammer drill and masonry bit for 3/8" expansion bolt
3. Phillips screw driver (optional: Phillips power screwdriver)
4. For hardwire only - electrical hand tools and wire nuts.
5. Fluorescent tubes (see sticker on fixture behind sign face)
6. Rags and spray cleaner

#### HARDWARE INCLUDED:

1. Suction cup
2. Keys
3. Leveling shims as required for site conditions
4. (4) 3/8" expansion bolts

## STEP 3 – INSTALLATION

1. Determine the exact position and set the kiosk in place. If the site is not level, place shims under the low end until the unit is approximately level.
2. From inside the ATM opening, mark the holes for anchor bolts onto the concrete below.
3. Set the kiosk aside and drill four holes in the concrete for the 3/8" expansion bolts.
4. Install and secure the kiosk with 3/8" expansion bolts (and shims, if necessary).
5. If the kiosk is not level, dry pack under the base plate of the kiosk with a non-shrinking grout such as EMBICO grout.
6. Electrical:
  - a. Plug-in type: With the ATM partially away from the kiosk, plug in the ATM to dedicated power and the black cord from the kiosk into house power. Feed all low voltage lines (such as data, alarm and phone) under the kiosk bottom shelf and up into the cabinet to be attached to their respective equipment.
  - b. Hardwire type: With the ATM and kiosk still away from the wall, install flex conduits, wire and cables from wall boxes to conduit ELL connectors installed in holes at the base of the kiosk.
7. Slide the ATM into the kiosk from the front until the back legs of the ATM touch the floor strap of the kiosk. Using a pry bar, lift back legs of ATM over the floor strap of the kiosk. Push ATM into the kiosk until the face of the ATM is approximately 20 3/4" from the front of the kiosk.
8. Clean up with soap and water or spray household cleaner. Clean up any packing materials.

Note: If it is necessary to remove the floor strap, store it in a safe place in order to re-install before shipping back to manufacturer.

If there are any questions: please call **(801) 298-8082** and ask for Customer Service.

### **Voiding of Warranties:**

These installation instructions are an integral part of the product warranties given by Companion Systems to the customer. Proper operation and maximum performance of the product depend upon proper installation. In the event that the product is installed by the customer, or by anyone performing the installation at the customer's request, in any manner other than in strict compliance with these instructions and specifications, all warranties, express or implied, are void, and all repairs, reinstallations and other modifications to the product necessary to bring the installation in compliance with these instructions shall be at the customer's sole expense.