 


# Model # 5956

## Installation Instructions

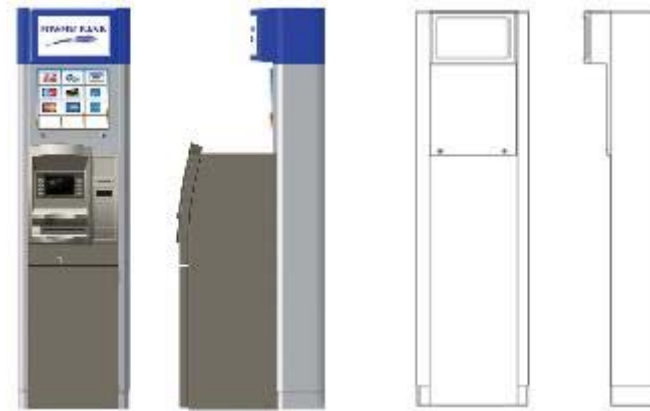

### STEP 1 – SITE PREPARATION

The site should be prepared before the kiosk is delivered. This will ensure that the installation goes as smoothly as possible. The utilities can be partially installed so that the final connections are easier to accomplish. The standard kiosk will need two circuits: One 20-amp circuit dedicated for the ATM and one 20-amp circuit for communication equipment if required. Check with the supplier of the ATM to verify the power requirements of the ATM and modify the electrical connections as required. Below are the two recommended configurations for supplying power to the kiosk and ATM

A communication line may also be required. The type of communications circuit depends on the customer application.

Always check with local building codes for local requirements on power and communication hookups. Modify these instructions according to local requirements. Always use professional technicians for installing the power and communications.

If there are leveling feet on the ATM, lift the ATM slightly and adjust the feet so the ATM is in the lowest possible position.

### STEP 2 – UNPACKING AND HANDLING

While transporting, uncrating, and handling, do not set the unit face against any obstruction without the appropriate padding.

#### **INSTALLER FURNISHED TOOLS & SUPPLIES:**

1. Pry bar to position and raise ATM for feet adjustment (If there are no leveling feet, 1/4" ABS shims will be needed).


2. Electric hammer drill and masonry bit for 3/8" expansion bolt
3. Phillips screw driver (optional: Phillips power screwdriver)
4. For hardwire only - electrical hand tools and wire nuts.
5. Fluorescent tubes (see sticker on fixture behind sign face)
6. Leveling shims as required for site conditions
7. Rags and spray cleaner

#### **HARDWARE INCLUDED:**

1. Suction cup
2. Keys

## **STEP 3 – INSTALLATION**

1. Determine the exact position of the kiosk and ATM. Set the kiosk in place. Adjust the leveling feet at the bottom of the kiosk until kiosk is plumb.
2. Loosen the four screws on the floor strap. Lower the floor strap until it is flat against the floor.
3. Mark the locations of the holes in the floor strap on the floor.
4. Install the anchor bolts per the manufactures' recommendations. To gain access to the area where the holes will be drilled, either move the kiosk or remove the floor strap. Either way is acceptable.
5. Secure the floor strap with the anchor bolt.
6. Tighten the floor strap to the kiosk.
7. Clean the construction debris from under the kiosk.
8. Place the ATM into the kiosk. Use extreme care not to hit the sides of the kiosk with the ATM. Slide the ATM into kiosk from the front until the back legs of the ATM touch the floor strap of the kiosk. Using a pry bar, lift back legs of ATM over the floor strap of the kiosk. Push ATM into the kiosk until the front of the kiosk is in its correct position.
9. Verify that the ATM lid is open that it will clear the kiosk door
10. Secure the ATM per the manufactures recommendations.
11. Connect the electrical and communication equipment.
  - a. Plug-in type: With the ATM partially away from the kiosk, plug in the ATM to dedicated power and the black cord from the kiosk into house power. Feed all low voltage lines (such as data, alarm and phone) under the kiosk bottom shelf and up into the cabinet to be attached to their respective equipment.
  - b. Hardwire type: With the ATM and kiosk still away from the wall, install flex conduits, wire and cables from wall boxes to conduit ELL connectors installed in holes at the base of the kiosk.
12. Clean up with soap and water or spray household cleaner. Clean up any packing materials.

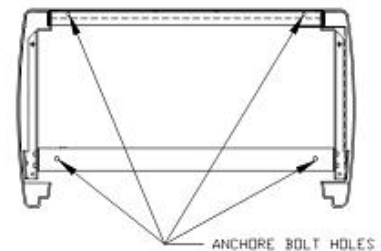

If there are any questions: please call **(801) 298-8082** and ask for Customer Service.

**Voiding of Warranties:**

These installation instructions are an integral part of the product warranties given by Companion Systems to the customer. Proper operation and maximum performance of the product depend upon proper installation. In the event that the product is installed by the customer, or by anyone performing the installation at the customer's request, in any manner other than in strict compliance with these instructions and specifications, all warranties, express or implied, are void, and all repairs, reinstallations and other modifications to the product necessary to bring the installation in compliance with these instructions shall be at the customer's sole expense.