


Model # 8600 / 8601

Installation Instructions

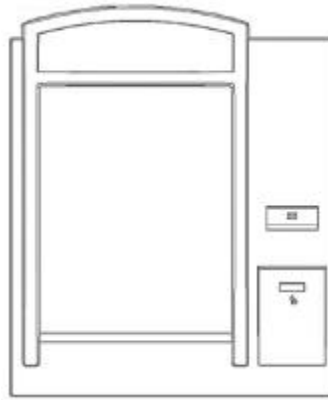

STEP 1 – SITE PREPARATION

RETROFIT INSTALLATION: (ATM is already in place)

Tuck fit: (surround rear panel tucks behind the ATM trim)

1. The ATM must be moved 1/4" (or as required) forward at the base, which creates a 1/4" gap behind the trim to allow surround to tuck behind ATM trim bezel.
2. Remove the ATM fascia or outer trim bezel, being aware of alarm systems which may be triggered if alarm is not shut off. If unfamiliar, have a qualified mechanic remove and replace the trim bezel.
3. Proceed to step 2.

Slip fit: (surround slips over outside of ATM trim bezel)

1. Machine does not move.
2. Trim bezel remains in place.
3. Proceed to step 2.

NEW INSTALLATION: (ATM is installed with surround.)

Tuck Fit: (surround rear panel tucks behind the ATM trim)

1. If the ATM wall opening is already provided, proceed to #2. Otherwise refer to the ATM manufactures specification.
2. Surround should be installed before the ATM so that the ATM trim bezel can be placed over the surround when the ATM is set. If the ATM is installed first, it must be set 1/4" out from the outside wall surface to allow for the surround back panel to tuck behind the trim.
3. Proceed to step 2.

Slip fit: (surround slips over outside of ATM trim bezel):

1. Same as tuck fit installation instructions above.

STEP 2 – UNPACKING AND HANDLING

While transporting, uncrating, and handling, do not set the unit face against any obstruction without the appropriate padding.

The boxes should be examined when received for any shipping damage.

Remove the packing material on site unless damage has occurred.

When removing the sign from the packing material make sure not to damage the product while cutting off the plastic wrap.

HARDWARE INCLUDED:

1. Two bottom mounting chair clips
2. One suction cup

TOOLS AND SUPPLIES LIST:

1. Tape measure and pencil for marking wall
2. Level
3. Wall anchors: Supplied by the installer.
 - a. The type of anchor is determined by the construction of the wall
4. Small socket set if using lag screws
5. Drilling Equipment for ½" anchor holes in wall
6. Fluorescent tubes (see decal on light fixture inside sign cabinet)
7. Rags and spray cleaner

STEP 3 – INSTALLATION

GENERAL INFORMATION

This unit requires some provision to route the electrical from the unit into the branch building. Always check with the local building codes for requirements. Modify these instructions according to local requirements. Always use professional technicians for installing the power.

Note: Please refer site configuration question to the contract administrator of the bank.

SIGN ACCESS

The sign is secured by a hook and loop fastening system. The hook and loop is applied to the top and sides of the sign.

1. Place the suction cup, provided with the surround, at the upper right corner of the surround sign.
2. Pull the sign until it disengages from the surround and you are able to grasp the sign.
3. Gently pull the sign away from the surround until it is free from the surround.

4. To re-install the sign, place the sign in the opening. Press firmly around the perimeter of the sign to engage the hook and loop fastening system.
5. Make sure sign is securely attached to the surround.


SURROUND INSTALLATION

1. Marking top mounting location:

- a. Using two workmen set the surround in place.
- b. Remove the sign.
- c. Center the surround in the ATM wall opening and ATM.
- d. If the opening for the ATM has not been cut, do so now by marking the location on the surround and cutting the hole using a saw designed to cut fiberglass.
- e. Place a level on the inside edge of the ATM pan to assure that it is plumb.
- f. Using a pencil mark the wall along the top of the surround and sides of the surround.
- g. Using a pencil mark the wall through the mounting holes in the back of the surround in the light pan area.
- h. If there are no holes in the light pan, drill a ¼" hole in each corner of the light pan.
- i. Remove the surround from the wall and set it aside. Use care not to damage the surround when moving it out of the way.
- j. Install the appropriate fastening devices per the manufacture specification. Determine the location for the electrical connection.
- k. Using a 1 ½" hole saw cut a hole through.
- l. Thread the cord through the wall.
- m. Electrical connection must be made inside the ATM room into a standard outlet. The load is approximately one amp; no new or dedicated circuit is required. Do not plug the surround electrical into a dedicated ATM power supply.

2. Installing the bottom chair clips: Note: If a wall panel is being used, the bottom clip can be flipped over for easier installation. Bottom chair clip installation may be done concurrently with the top mounting instructions.

- a. Remove the surround from the wall.
- b. Remove bottom chair clips from the surround.
- c. Place the clip against the wall on the pencil lines previously drawn (see Figure 2). Mark the wall around the slotted holes in the clip. Remove the clip.
- d. Locate the center of the slotted hole. Drill in the center of the slot marks and install the chair clips in the same manner as the top clips
- e. Re-hang the surround and check the fit of the bottom chair clips. Make a note of the adjustments necessary and remove the surround and make any necessary adjustments.
- f. Once the clips have been adjusted properly, push in on the bottom of the surround and drill and drive the sheet metal screws through the chair into the surround.

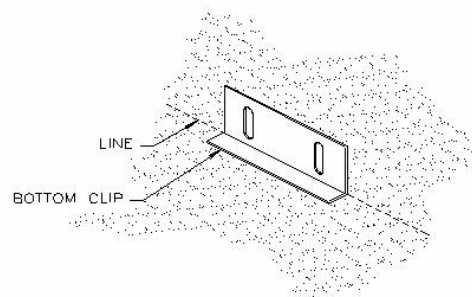

3. Clean up all packing and construction materials.
4. Clean the surround per the maintenance instruction of this document.

STEP 4 – MAINTENANCE

Monthly

1. To protect the finish of the surround, wash with soap and water to remove dust, dirt and other debris. Wash and dry the exterior of the surround in a straight motion along the length of the surround. Use a natural chamois or terry cloth towel for drying.
2. Remove all accumulated trash and debris from around the unit.

Biannually

1. Wash and wax the exterior of the surround. Use any name brand liquid or paste automotive wax. They are easy to use and provide excellent protection. Apply the wax in circular motion and finish by wiping in a straight motion along the length of the surround. This results in a uniform drying pattern. After it is applied to one section, move to the next section and let the first area dry (per the wax manufacturer recommendations). Then go back and polish the first area. Continue this process until the surround is completely waxed and polished.

Annually

1. Replace all light bulbs
2. Inspect all electrical connections and replace as necessary.

Installation questions concerning this unit can be handled by calling the manufacturer directly. Contact a customer service representative at **(801) 936-8082**.

Voiding of Warranties:

These installation instructions are an integral part of the product warranties given by Companion Systems to the customer. Proper operation and maximum performance of the product depend upon proper installation.

In the event that the product is installed by the customer, or by anyone performing the installation at the customer request, in any manner other than in strict compliance with these instructions and specifications, all warranties express or implied, are void. All repairs and other modifications to the product necessary to bring the installation in compliance with these instructions will be at the customers' sole expense.

Warranty-related claims or questions may be made by calling Companion Systems Customer Service at **(801) 936-8082**.