


Model # 5954

Installation Instructions

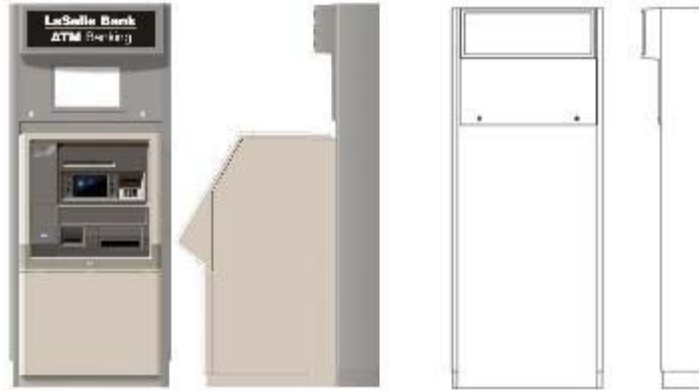

STEP 1 – SITE PREPARATION

ATM is on site and about two or more feet forward of final position. Locate keys to unlock the top lid (not the safe) of the ATM. If required, arrange to have the proper personnel present while opening the ATM lid. Site electrical provisions should have already been made.

If there are leveling feet, lift the ATM slightly and adjust the feet so the ATM is approximately 1/4" off the floor. If there is not any leveling feet, 1/4" shims will need to be added to the four outer most corners of the ATM.

STEP 2 – UNPACKING AND HANDLING

While transporting, uncrating, and handling, do not set the unit face against any obstruction without the appropriate padding.

INSTALLER FURNISHED TOOLS & SUPPLIES:

1. Pry bar to position and raise ATM for feet adjustment (If there are no leveling feet, 1/4" ABS shims will be needed).
2. Electric hammer drill and masonry bit for 3/8" expansion bolt
3. Phillips screw driver (optional: Phillips power screwdriver)
4. For hardwire only - electrical hand tools and wire nuts.
5. Fluorescent tubes (see sticker on fixture behind sign face)
6. Rags and spray cleaner

HARDWARE INCLUDED:

1. Suction cup
2. Keys
3. Leveling shims as required for site conditions
4. (4) 3/8" expansion bolts

STEP 3 – INSTALLATION

1. Raise the ATM lid all the way. Observe where there is space to drive four screws through the back wall of the ATM, between 1" and 2 1/2" away from the ATM sides. Transfer these points to the backside of the ATM with a pencil and tape measure. Working from behind the ATM, drill these points with an 11/64" bit. Drilling from the outside prevents drill fragments from falling into the ATM.
2. Remove double stick tape protector on back wall of the kiosk, then set the tower against the back of the ATM, while resting on 1/4" shims to hold it up. At this point, the top of the ATM should be 1/8" below the sign box of the kiosk. Working from inside the ATM upper compartment, power drive #8 x 32 self drilling screws through the new holes in the back of the upper ATM cabinet and into the back of the kiosk. A second workman may be needed to hold the kiosk during the installation of the kiosk.
3. Electrical
 - a. Plug-in type: With the ATM still away from the wall, plug in the ATM to dedicated power and the black cord from the cabinet into house power. Feed all low voltage lines (such as data, alarm and phone) under the tower cross member and up into the cabinet to be attached to their respective equipment.
 - b. Hardwire type: With the ATM and tower still away from the wall, install flex conduits, wire and cables from wall boxes to conduit ELL connectors installed in holes at the base of the tower.
4. Move the ATM back into final position, but do not pry under, or push against the side cabinet.
5. Clean up with soap and water or spray household cleaner. Clean up any packing materials.

If there are any questions: please call **(801) 298-8082** and ask for Customer Service.

Voiding of Warranties:

These installation instructions are an integral part of the product warranties given by Companion Systems to the customer. Proper operation and maximum performance of the product depend upon proper installation. In the event that the product is installed by the customer, or by anyone performing the installation at the customer's request, in any manner other than in strict compliance with these instructions and specifications, all warranties, express or implied, are void, and all repairs, reinstallations and other modifications to the product necessary to bring the installation in compliance with these instructions shall be at the customer's sole expense.